


## Instructions for installation of wine racks

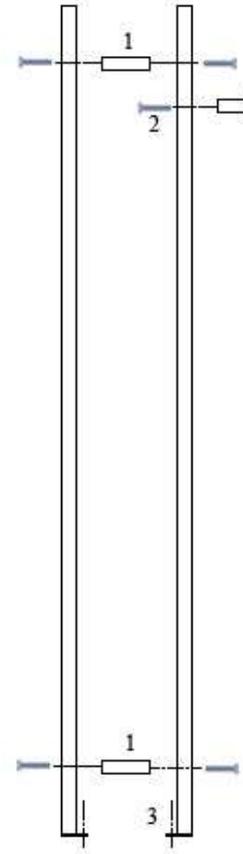

### Standard Racks (to be connected to wall / floor)

1. Using short spacers and hex head bolts, connect two rack halves making sure mesh is to the outside.
2. Connect wall brackets using hex head bolts – finger tight only at this stage.
3. Move rack into position and ensure front of rack is vertical.
4. Use a pencil to mark the position of holes in floor and wall.
5. Pull rack away from wall and remove wall brackets.
6. Concrete floor: drill 6.5 mm holes in marked locations.  
or  
Timber floor: drill 3.0 mm holes in centre of marked locations.
7. Masonry walls: drill 5.5 mm holes in marked locations  
or  
Plasterboard walls: drill 8.0 mm holes in marked locations
8. Fix the wall brackets to the wall:  
Masonry wall: use the star plugs and 38 mm x 8G mm screws  
or  
Plasterboard wall: use the nylon wing anchors and 38 mm x 8G mm screws
9. Move the rack back into position and connect it to the wall brackets using 2 hex head bolts.
10. Fix the rack to the floor:  
Concrete floor: push the nylon mushroom plugs through the holes in the baseplates into the holes drilled in the floor and drive the nail home with a hammer.  
or  
Timber floor: Screw the rack to the floor using the 8G x 25 mm Pan head screws.
11. Tighten all bolts.
12. Fill with wine and enjoy.



### **Disclaimer**


You have been supplied hardware for the connection of your wine rack to walls and floors. This hardware has been designed assuming that the full weight of the wine rack will be taken by the floor. The function of the wall attachments is for lateral bracing only. In situations where customers intend to suspend our wine racks from walls or ceilings, the services of a qualified engineer should be engaged to ensure a safe installation. The standard hardware supplied with our wine racks may not be suitable in such situations and no warranty is provided should the supplied hardware be used for purposes for which it was not designed.

## Instructions for installation of wine racks



### Back to Back Racks


1. Using short spacers and hex head bolts, connect two mesh frames together making sure mesh is to the outside in each case.
2. Connect a pair of racks together using the long spacers and 4 hex head bolts.
3. Move each pair of racks into fixing position.
4. Use a pencil to mark the position of holes in the floor.
5. Move the rack assembly away.
6. Concrete floor: drill 6.5 mm holes in marked locations.  
or  
Timber floor: drill 3.0 mm holes in centre of marked locations.
7. Fix the rack to the floor:  
  
Concrete floor: push the nylon mushroom plugs through the holes in the baseplates into the holes drilled in the floor and drive the nail home with a hammer.  
or  
Timber floor: Screw the rack to the floor using the 8G x 25 mm Pan head screws.
8. Tighten all bolts.
9. Fill with wine and enjoy.

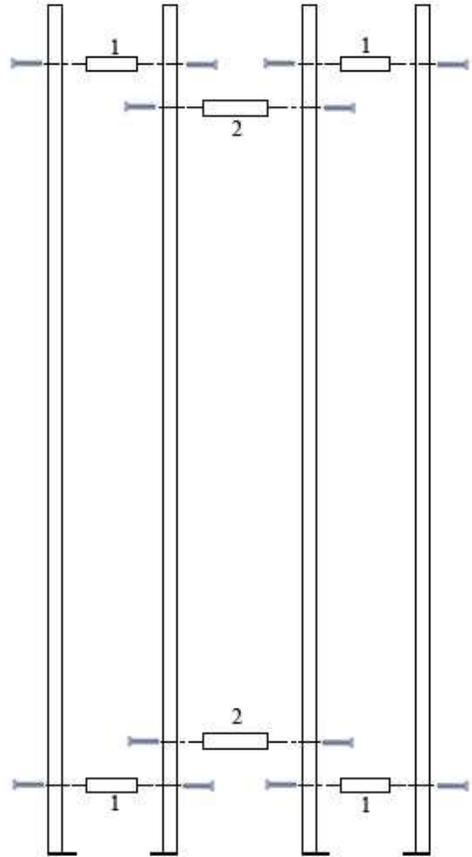

### **Disclaimer**

You have been supplied hardware for the connection of your wine rack to walls and floors. This hardware has been designed assuming that the full weight of the wine rack will be taken by the floor. The function of the wall attachments is for lateral bracing only. In situations where customers intend to suspend our wine racks from walls or ceilings, the services of a qualified engineer should be engaged to ensure a safe installation. The standard hardware supplied with our wine racks may not be suitable in such situations and no warranty is provided should the supplied hardware be used for purposes for which it was not designed.

### “Indi” Wine Rack Packing List

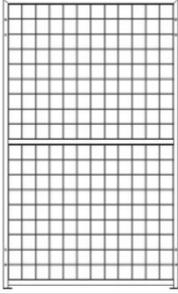Item	Quantity	Picture
Tubular Steel and Mesh Frame	2	
Short spacer	4	
Wall bracket	2	
2" x 3/8" bolt	10	
25 x 6.5 mushroom head anchor	4	
25 x 10G pan head screw	4	
Red star plug 35 mm	4	
38 x 8G pan head screw	4	
Nylon wing anchor	4	
3" x 3/8" bolt nut and washers (for side by side connections)	4	

### Back to Back "Kit"

Item	Quantity	Picture
Long spacer	4	
2" x 3/8" bolt	8	